


## ASSEMBLY INSTRUCTION FOR SONI SB 700 COMPRESSOR JACKET

1.

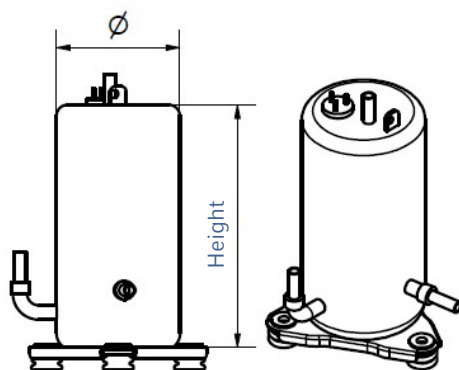


Measure the compressor dimensions:

- ▶ Diameter and height

Accessories and tools:

- ▶ Cardboard cutter
- ▶ Folding rule
- ▶ Steel ruler
- ▶ Pencil

2.

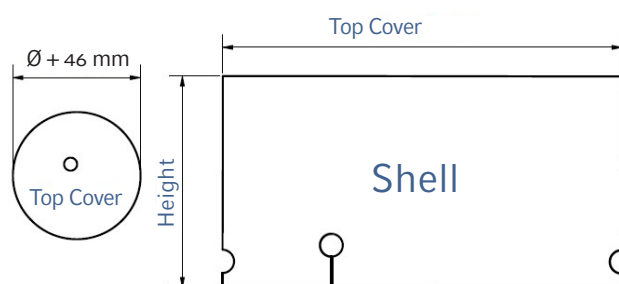


Cut out the shell and the top cover from the soni sb 700 panel.

- ▶ Top cover:  $\text{Ø} + 46 \text{ mm}$
- ▶ Shell:  $(\text{Ø} + 45 \text{ mm}) \times 3.14$

Place the parts around resp. on the compressor. Mark the positions of the tubes etc. and create the corresponding openings.

Advice: Loose fit of the shell is preferable.

3.

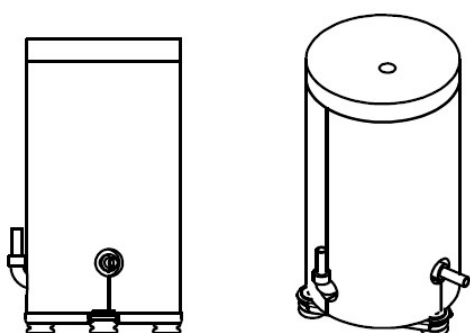

Fit the shell (black face on the outside) snugly around the compressor. Place the cover on the top and seal the seams with soni VLC-01 adhesive tape.

